

| Part Number | Description | Part Included |
|-------------|--------------------------------------|---------------|
| F60054 | AXLE,VAULT,FRONT,412,SILVER | C |
| F60060 | BEARING 6805 CM | B |
| F60056 | ENDCAP SET,VAULT,F,15x100 | A,A |
| F60059 | ENDCAP SET,VAULT,F,15x100,TORQUE CAP | D,D |
| F60057 | ENDCAP SET,VAULT,F,20X110 | E,E |
| F60058 | ENDCAP SET,VAULT,F,9X100,QR | F,F |
| D60185 | BEARING,DRIFT,KIT,VAULT,F+R | NOT SHOWN |

NOTES

1. See raceface.com for service and repair instructional videos
2. Remove end caps by hand, if tight try using a rubber glove or blind bearing puller tool
3. Always install rotor side bearing first
4. End caps are the same for both ends of the hub
5. Lube outside facing bearing seals and end cap seals with light grease

