

Part Number	Description	Part Included
F60055	AXLE,VAULT,FRONT,414 BOOST,BLACK	C
F60060	BEARING 6805 CM	B
F60056	ENDCAP SET,VAULT,F,15x110 BOOST	A,A
F60059	ENDCAP SET,VAULT,F,15x110 BOOST,TORQUE CAP	D,D
F60086	ENDCAP SET,VAULT,F,414,20X110 BOOST	E,E
D60185	BEARING,DRIFT,KIT,VAULT,F+R	NOT SHOWN

NOTES

1. See raceface.com for service and repair instructional videos
2. Remove end caps by hand, if tight try using a rubber glove or blind bearing puller tool
3. Always install rotor side bearing first
4. End caps are the same for both ends of the hub
5. Lube outside facing bearing seals and end cap seals with light grease

