

Part Number	Description	Part Included
F60121	AXLE,VAULT,FRONT,415 BOOST,BLACK	D
F60123	BEARING,18X30,CN,AM	C
F60142	SEAL KIT VAULT FRONT 415 AM	B,B
F60100	ENDCAP SET,VAULT,415,15x110 BOOST	A, A
F60122	ENDCAP SET,VAULT,F,415,15x110 BOOST,TRQ CAP	E, E
D60185	BEARING,DRIFT,KIT,VAULT,F+R	NOT SHOWN

NOTES

1. See raceface.com for service and repair instructional videos
2. Remove end caps by hand, if tight try using a rubber glove or blind bearing puller tool
3. Always install rotor side bearing first
4. End caps are the same for both ends of the hub
5. Lube outside facing bearing seals and end cap seals with light grease

