

INSTRUCTIONS

IMPORTANT: Please completely understand all user instructions and safety information before using this product.



1. Ensure inflator valve is closed


Turn inflator valve clockwise until it is fully closed.



2. Connect cartridge to inflator

Thread in cartridge clockwise quickly to puncture cartridge

*Do not activate a CO₂ cartridge until ready to use.

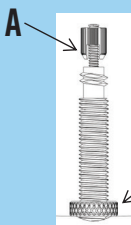

3. Unscrew valve stem knob (Presta valve only)

NOTICE: When pressing the **NANOFLATOR** onto Presta Valves:

A. Check that the valve is fully open by turning the valve counter-clockwise at the end of the stem (See diagram).

B. Ensure that the locking nut is tightened at the base of the stem to keep the stem from going into the rim (See diagram).



4. Thread inflator onto valve stem

Turn inflator head clockwise until it is all the way on the valve.

***IMPORTANT:** Presta valve **MUST** be opened before inflating tire. Failure to open valve completely may cause injury or damage to inflator.

5. Open inflator valve to fill

Turn inflator valve counter-clockwise to release CO₂ into tire.

The more you rotate, the faster the inflation.

*Hold CO₂ cartridge upright for best results.



6. Close inflator valve when finished

Turn inflator valve clockwise until it is fully closed to stop the flow of CO₂

***CAUTION:** CO₂ cartridge must be completely empty before removal from inflator. Removing an activated cartridge from an inflator is dangerous! Do not over-inflate tire as injury can result. To remove inflator, unscrew the inflator head from the tire valve.