INSTRUCTIONS

IMPORTANT: Please completely understand all user instructions and safety information before using this product.

CONNECT CARTRIDGE TO INFLATOR



THREAD IN CLOCKWISE AND QUICKLY

 $^{\circ}\mathrm{Do}$ not activate a $\mathrm{CO_{2}}$ cartridge until ready to use.

UNSCREW VALVE STEM KNOB



- Turn valve stem knob counter-clockwise until fully open.

IMPORTANT: Failure to open valve completely may cause injury or damage.
If you have a locking nut at the base of the valve stem.

*IMPORTANT: Presta valve MUST be opened before inflating tire. Failure to open valve completely may cause injury or damage to inflator.

*Hold CO_a cartridge upright for best results.



INFLATE TUBE/TIRE WITH LOCKING NUT

Push black end of inflator onto valve stem, with cartridge attached.

Press down to compress the spring.

CO₂ will release.



INFLATE TUBE/TIRE - NO LOCKING NUT

Press on the outside of the tire, opposite the valve. At the same time press the SPEED CHUCK onto the valve stem until it is fully seated. Once in place, let go of the tire and inflate by pressing the inflator down, compressing spring.

*CAUTION: CO₂ cartridge must be completely empty before removal from inflator. An activated cartridge removed from an inflator is dangerous! Do not over-inflate tire as injury can result.