

### INSTALLATION INSTRUCTIONS

#### IMPORTANT:

PLEASE COMPLETELY UNDERSTAND ALL USER INSTRUCTIONS AND SAFETY INFORMATION BEFORE USING THIS PRODUCT. AS WITH ANY HIGH TECH PRODUCT YOU WILL NEED TO ROUTINELY CHECK FOR LOOSE HARDWARE, CRACKS OR OTHER DAMAGE AND REPLACE ITEMS AS NECESSARY. DO NOT USE PRODUCT IF ANY OF THESE CONDITIONS EXIST.

#### HARDWARE REQUIRED

					
M5 x 12mm Socket Head Screw	M5 Flat Washer (x2)	M5 x 14mm Socket Head Screw <b>FOR VERSA 500</b>	M5 Nylon Washer	M5 x 16mm Socket Head Screw <b>FOR VERSA 200</b>	M5 Nylon Spacer

#### TOOLS REQUIRED

3mm Hex Wrench  
4mm Hex Wrench  
8mm Open Ended Wrench  
Torque Wrench up to 20 in lbs (2.3 Nm)



#### SPECIAL NOTICE:

To mount the Torpedo Versa system on your Bontrager Monobar Extensions, you will need to purchase a separate **Bontrager Speed Concept Between-the-Arms Mount Kit**. See Trek for purchasing this separate piece. This part mounts to the Monobar to allow you to mount the cage to the extensions.



Figure A

1. Attach the Speed Concept Between-the-Arms Mount to the Monobar using the hardware included in the kit. **Figure A**
  2. Remove the bottle from the Torpedo Versa System
  3. Remove the cage from the Versa Mounting Plate using a 4mm Hex Wrench and an 8mm Open Ended Wrench
  4. Remove both of the mounting clamps from the Torpedo Versa System using a 3mm Hex Wrench.
  5. There are three sets of mounting holes in the Between-the-Arms Mount; select which one would work best by lining up the cage and finding the ideal position. **Figure B**
  6. If you plan on using either the Versa Computer Mount or the Aero Computer Mount, mount the cage and Versa Mounting Plate using the same hardware that was removed before. Place the M5 x 12mm Socket Head screw through an M5 washer, through the front slot in the cage, through the mounting plate, and into the front hole of the selected position in the mount. Place the longer M5 screw (14mm for Versa 500, 16mm for Versa 200) through the black Nylon Washer or Spacer, through an M5 washer, through the rear slot in the cage, through the mounting plate, and into the remaining hole in the mount. **Figure C**
- NOTE:** If you do not plan on using either of the computer mounts, you do not need to use the mounting plate and can attach the cage directly to the Between-the-Arms Mount.
7. Torque both cage screws to 20 in lbs (2.3 Nm)
  8. Place the bottle back in the cage by rotating the bottle and pushing in. Once the bottle is inserted, rotate the bottle back so the rear cage screw locks the bottle in place. Make sure the rear tab of the cage slides into the rear bottle recess. **Figure D**
  9. Follow the steps in the Torpedo Versa Instructions for setting up the bottle and adjusting the computer mount.

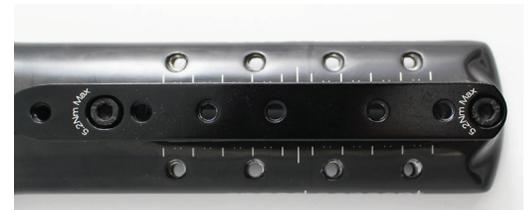


Figure B



Figure C



Figure D